




Tüm Hakları Saklıdır.

Instructions for Installation

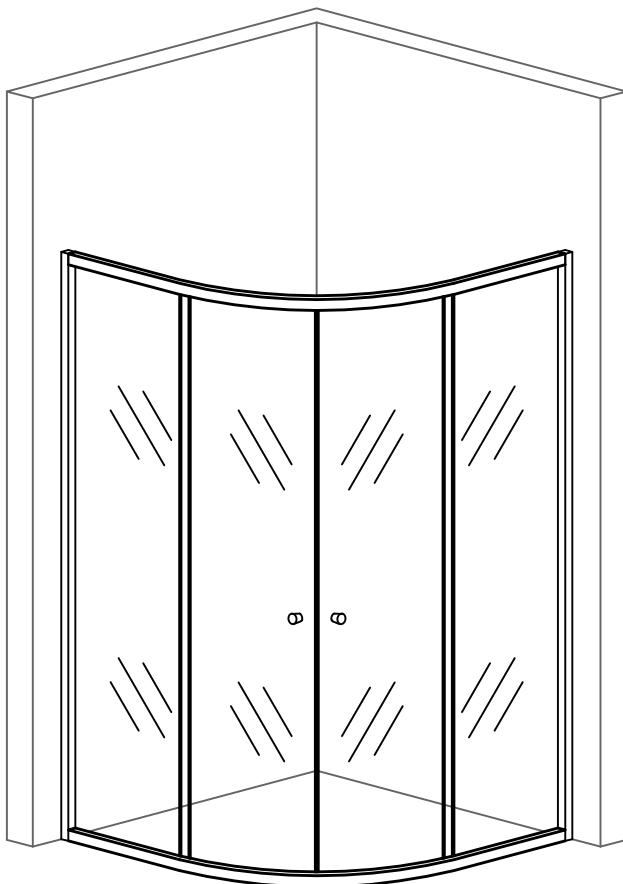

**XTREM DO 22
SLIDE SYSTEM**

Necessary Tools



Before you start:

- **WARNING:** Please read these instructions carefully before starting the installation. Incorrect installation may cause serious malfunctions during use. Always follow the instructions and keep them for future reference.

- The shower enclosure is designed to allow an adjustment of 20 mm when installed on nonparallel walls".

- When you are ready to start, make sure you have the correct tools, plenty of space, and a clean and dry area for installation.

- It takes two people to install the product. Although these instructions are extensive, please remember that it is recommended to have the product installed by a technically competent installer.

- Make sure to install the shower enclosure on a flat shower tray or floor and on vertical walls.


- Attention: The dowels provided with this product are for ceramic walls only. Plasterboards or erected walls may require fixing tools that are not provided. (Always make sure that the dowels and connectors are suitable for the wall type.)

- Attention: Please hold all the glass parts carefully. Any damage on the edges or any scratches on the surface occurred during installation or normal use may cause the glass to break suddenly. Tempered glass will break into very small pieces that would still have sharp edges.


- Attention: Be careful when drilling the wall so as not to damage hidden pipes or power cables.

- When working near a shower tray or bathtub, make sure it is covered to prevent small parts from falling into the drain.


Installation

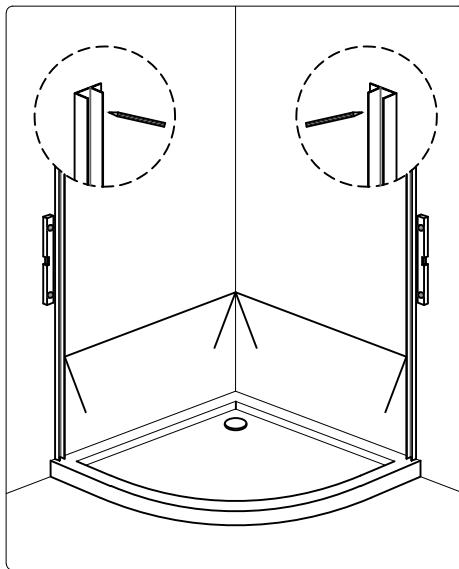


1. Adjust two wall profiles on the edge of the shower tray to ensure that there are even not less than 10 mm. Use a water gauge to ensure that both of them are vertical.

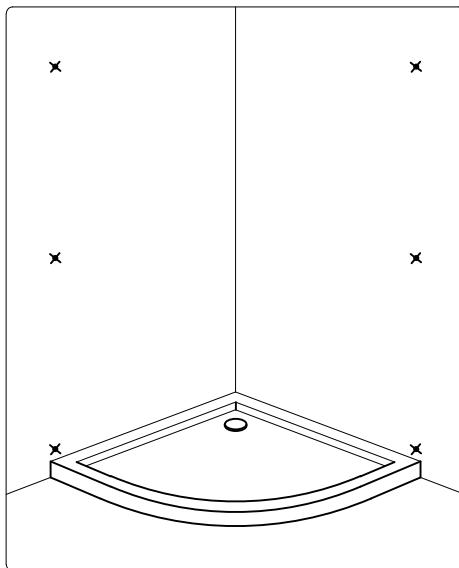


2. Making sure you do not move the wall profiles, use a marker to mark the hole points on the wall. Use a drill it suitable for the wall type to drill the holes. Use a plastic hammer to insert the dowels into the holes drilled.

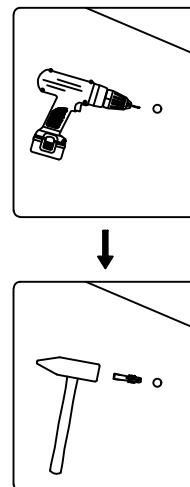

Installation

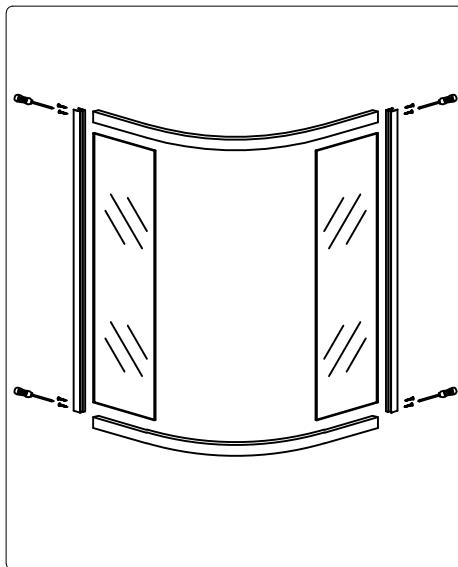


3. In an empty area, place fixed glasses into the channels of rail profiles and glass profiles. To create the frame, fix the glass profiles onto the ends of the upper and lower rail profiles with screws.

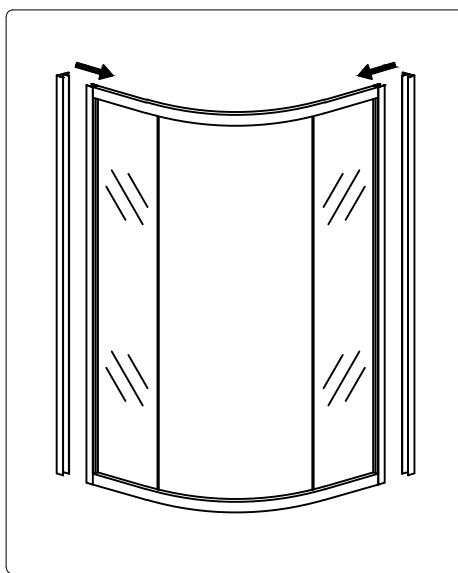


4. Insert the glass profile on both sides into the wall profiles.


Note: For glasses with pattern, always make sure that the pattern is on the outside.

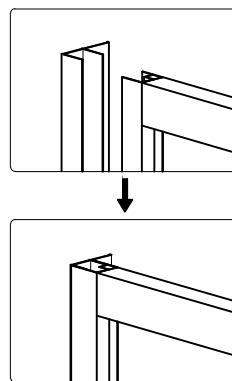


Installation

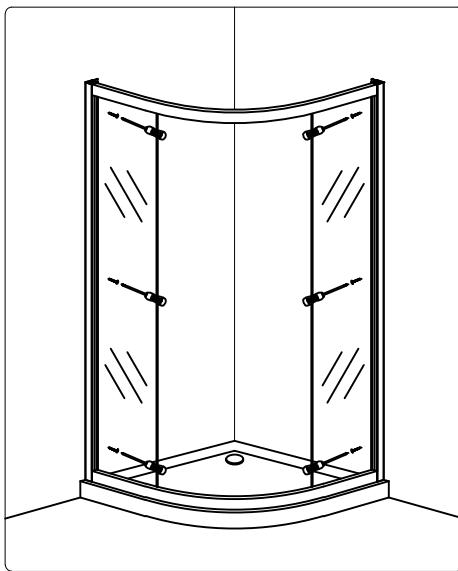


5. On the frame you just created, align the holes on the wall profiles with the dowels in the holes on the walls, and use screws to fix them on the wall.

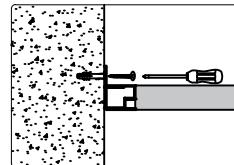


6. After inserting and adjusting the profiles, drill the glass and wall profiles and fixed them to each other with screws. Insert the screw caps.

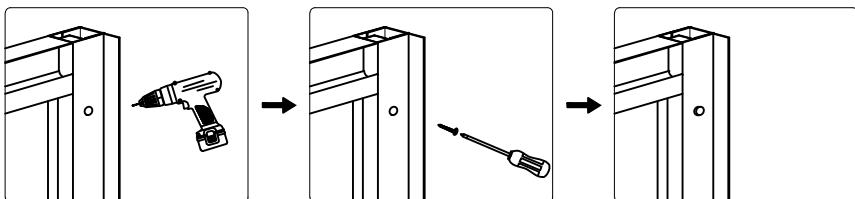

Installation



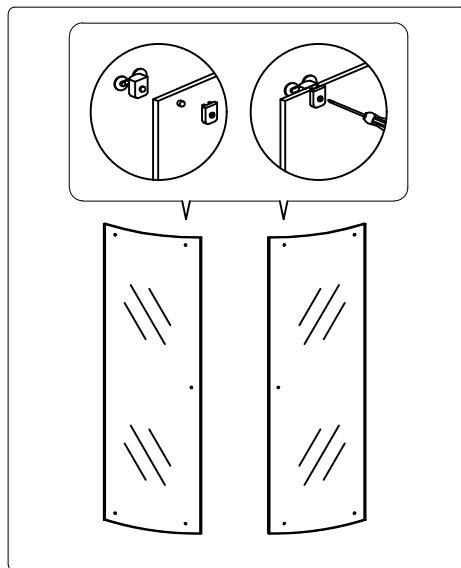


7. Remove the screws on the bearings, put them in the holes on the glass and tighten the screws.

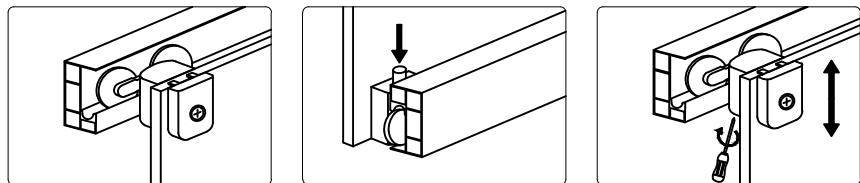


8. On the upper section, insert the bearing wheels into the rail channel. On the lower section, press on the spring-loaded pin to insert the bearing rings into the profile channel. Adjust the height using the pin screws on the upper bearings.

Installation

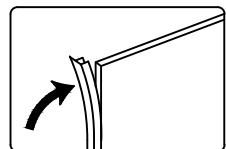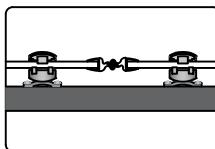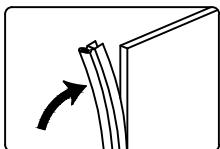


9. Insert magnetic seals onto the door glass. Turn the adjustment screws on the bearings to make sure that they get into contact in a way that there is no gap between the seals.


Installation method for water sealant

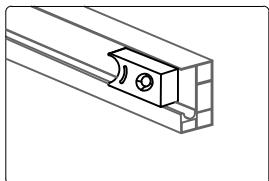


10. After the adjustments of magnetics and doors are complete, you should place the stopper into where the bearings are and attach it to the profile with a help of a screw.

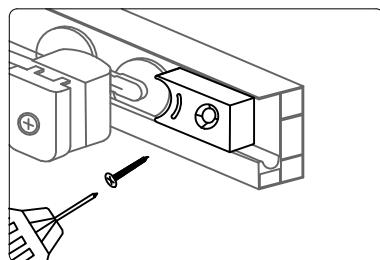


Installation of bearings

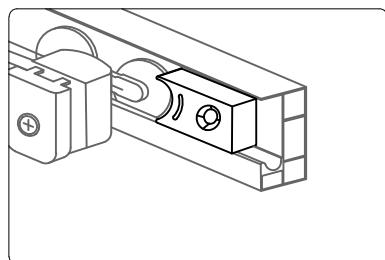

Installation

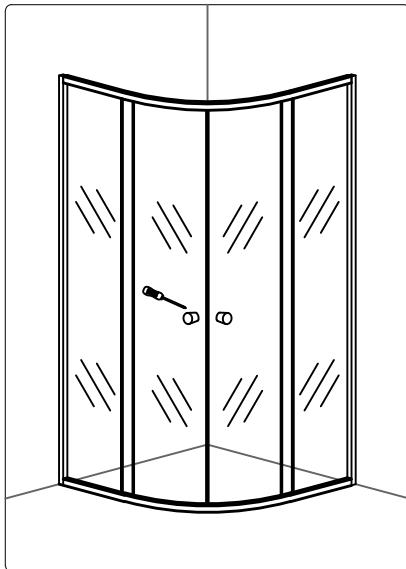

11. Thread the handle pins through the holes in the glass of door, and tighten the screws to fix it.

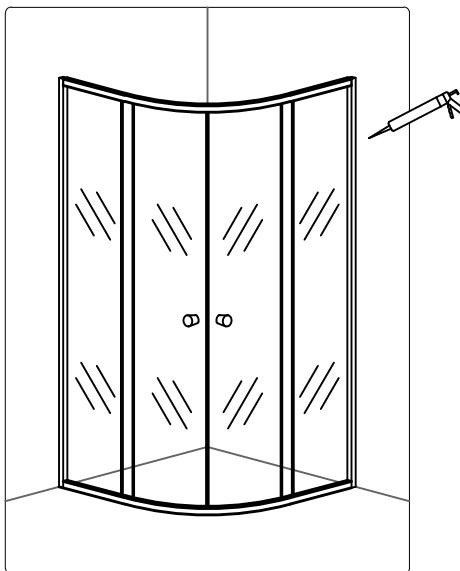

12. Once installation is done, apply silicone sealant on the connection points outside the shower enclosure.

Note: Before installation, make sure that the environment is absolutely clean and dry.

After the installation



13. The product must not be used for the following 24 hours after the installation, therefore once the installation is done, " DO NOT USE" scalant must be applied to the shower enctosure , where it can be easily seen



14. The brand label must be applied to the desired area by removing the anti adhesive.



15. Do not forget to keep warranty certificate included in the package of product.

Note: The warranty certificate is valid tor two years.

FACTORY - CENTRAL

Ömerli Neigh. Burçhan Street No:15/1
Hadımköy / İstanbul / Türkiye

T : +90 212 435 65 77
+90 212 435 97 46
F : +90 212 435 96 81

